

## CONFIGURING X4 BEACONS UTILIZING THE PHYSICAL WEB

*Please configure one beacon at a time.*

1. Download the RadBeacon app
2. Insert the batteries
  - The configurable state begins once 2 of the 4 batteries are inserted
  - If you've already inserted your batteries, open the case and press the blue button to restart the configurable window
  - This step will only have to be completed one time, as the beacon will keep its configuration when the batteries are replaced
3. Open the RadBeacon app and scan for the RadBeacon
  - For iOS users: Swipe down on the empty beacon list to begin scanning for configurable beacons.
  - For Android users: Press the "scan" button.
4. Tap on the beacon in the list that you would like to configure
5. Turn on Eddystone URL
6. Turn all others beacon formats off
7. Enter your HTTPS URL
8. Save all of the above settings
  - For iOS users: Press the "actions" button, then "apply settings"
  - For Android users: Press the "apply" button in the top right corner
9. When prompted to enter the 8-digit PIN is 00000000
10. If you choose to update your PIN, press the "actions" button followed by the "update pin" button